

DUKANE

Camera 210 & 220



USER'S MANUAL

Table of Contents Models 210 & 220

Chapter 1 Introduction

- 1.1 Introduction
- 1.2 Certification
- 1.3 Warning
- 1.4 Safety Instruction
- 1.5 Specification

Chapter 2 Package Content

Chapter 3 Product Overview

- 3.1 Digital Presenter
- 3.2 I/O Connection
- 3.3 Infrared Remote Control (220)

Chapter 4 Using the Presenter

- 4.1 Getting Started
- 4.2 Using the Menu
- 4.3 Menus
- 4.4 Base bottom switches

Chapter 5 Troubleshooting

Chapter 1 Introduction

Thank you for purchasing the camera.

1.1 Introduction

With a stylish and streamlined look, this Digital Presenter is outstanding. The goose-neck technology provides more flexibility, a better viewing angle for the camera or the lamp, plus space-saving storage.

Beyond that, the Digital Presenter is designed to combine many practical functions that help presenters deliver successful presentations. The digital presenter displays any document or 3D object on a LCD or DLP projector. It switches between the camera and a PC output, plus assists the presenter by providing additional light with the lamp.

This user manual is a quick guide. Please read this manual carefully before you set up this Digital Presenter.

1.2 Certification





UL, CE, FCC

1.3 Warning

■ Safety Precautions

Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

This Digital Presenter has a ground-type AC line Plug. This is a safety feature to ensure that the plug will fit into the power outlet. Do not try to defeat this safety feature.

<div>  <div>CAUTION RISK OF ELECTRIC SHOCK</div>  </div>			
Caution: To reduce the risk of electric shock. Do not remove cover (or back). No user-serviceable parts inside. Refer servicing to licensed service Personnel.			
	This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.		This symbol indicates that there are important operating and maintenance instructions in the User's Manual.

■ FCC Warning

This Digital Presenter has been certified to comply with the limits for a Class A computing device, pursuant to Subpart J of Part 15 of FCC Rules. These limits are designed to provide reasonable protection against a harmful interference when the equipment is operated in a commercial environment.

■ EN55022 (CE Radiation) Warning

This product is intended for use in a commercial, industrial, or educational environment. It is not intended for residential use.

This is a Class A product. In a domestic environment it may cause radio interference, in which case the user may be required to take adequate measures. The typical use is in a conference room, meeting room or auditorium.

1.4 Safety Instruction

Always follow these safety instructions when setting up and using the Digital Presenter:

1. Do not place the Digital Presenter on an unstable trolley, stand or table.
2. Do not use the Digital Presenter near water or source of heat.
3. Use attachments only as recommended.
4. Use the type of power source indicated on the Digital Presenter. If you are not sure of the type of power available, consult your dealer or local electricity company for advice.
5. Place the Digital Presenter where it can be easily unplugged.
6. Insert the Digital Presenter's two-pin grounded plug into a properly grounded socket. Do not handle the plug with wet hands.
7. Always take the following precautions when handling the plug. Failure to do so may result in sparks or fire.
 - Ensure the plug is free of dust before inserting it into a socket.
 - Ensure that the plug is inserted into the socket securely.
8. Do not overload wall sockets, extensions leads or multi-way plug boards as this

may cause fire or electric shock.

9. Do not place the Digital Presenter where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
10. Unplug the projector from the wall socket before cleaning. Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.
11. Do not block the slots and openings in the projector case. They provide ventilation and prevent the Digital Presenter from overheating. Do not place the Digital Presenter on a sofa, rug or other soft surface or in a built-in installation unless proper ventilation is provided.
12. Never push objects of any kind through cooling slots. Never allow liquid of any kind to spill into the Digital Presenter.
13. Except as specifically instructed in this User's Manual, do not attempt to operate this product by yourself. Opening or removing covers may expose you to dangerous voltages and other hazards. Refer all servicing to licensed service personnel.
14. Unplug the Digital Presenter during thunderstorms or if it is not going to be used for an extended period, do not place the Digital Presenter or remote control on top of heat-emitting equipment or heated objects such as a car or radiator.
15. In the following situations, unplug the Digital Presenter from the wall outlet and refer servicing to licensed service personnel:
 - If the power cable or plug becomes damaged or frayed.
 - If liquid is spilled into it or the Digital Presenter has been exposed to rain or water.

1.5 Specification

Optics

- Fix Lens: F3.6; f=5.0 mm
- Shooting Area: 330mm x 250mm (Max.); 32mm x 24mm (Min.)
- Focus: Manual

Image:

- Pick-up Device: 1/3" CCD Progressive Scan
- Total Pixels: 1077(H) x 788(V)
- Effective Pixels: 1024(H) x 768(V)
- Frame Rate: 20 Frame/Sec
- White Balance: Auto
- Exposure: Auto/Manual
- Digital Zoom: 15X
- Image Mode: Normal/ Film/ Gray (Model 220 only)
- Gamma: Photo/ Text (Model 220 only)
- Image Flip: Up/Down Selectable
- RGB Output: XGA 60Hz/75Hz; SVGA 60Hz/75Hz Selectable

- Composite Video Output: NTSC/PAL Selectable

Lighting

- CCFL: Build in One Cathode fluorescent lamp

Input

- VGA Pass through: Model 210; HD-SUB 15 pin female.
Model 220; has a VGA adapter for DVI-I connector port.

Output

- VGA: HD-SUB, 15 Pins Female
- DVI: Digital & Analog Receptacle Connector (Model 220 only)
- C-video: RCA Jack
- USB: Standard USB Socket (Type B)
- DC 12V Output: DC Jack, 700 mA

Power

- Power Source: 100-240Vac
- Consumption: 18W

Dimension

- Operating: 400mm(L) X 140mm(W) X 360mm(H)
- Weight: About 2.4kg

Chapter 2 Package Content

Please make sure the package comes with the following items when you unpack:

- Power Cable
- VGA Cable
- DVI Adapter (220 only)
- USB Cable
- C-Video Cable
- Remote Controller (220 only)
- User's Manual
- CD

3.1 Digital Presenter

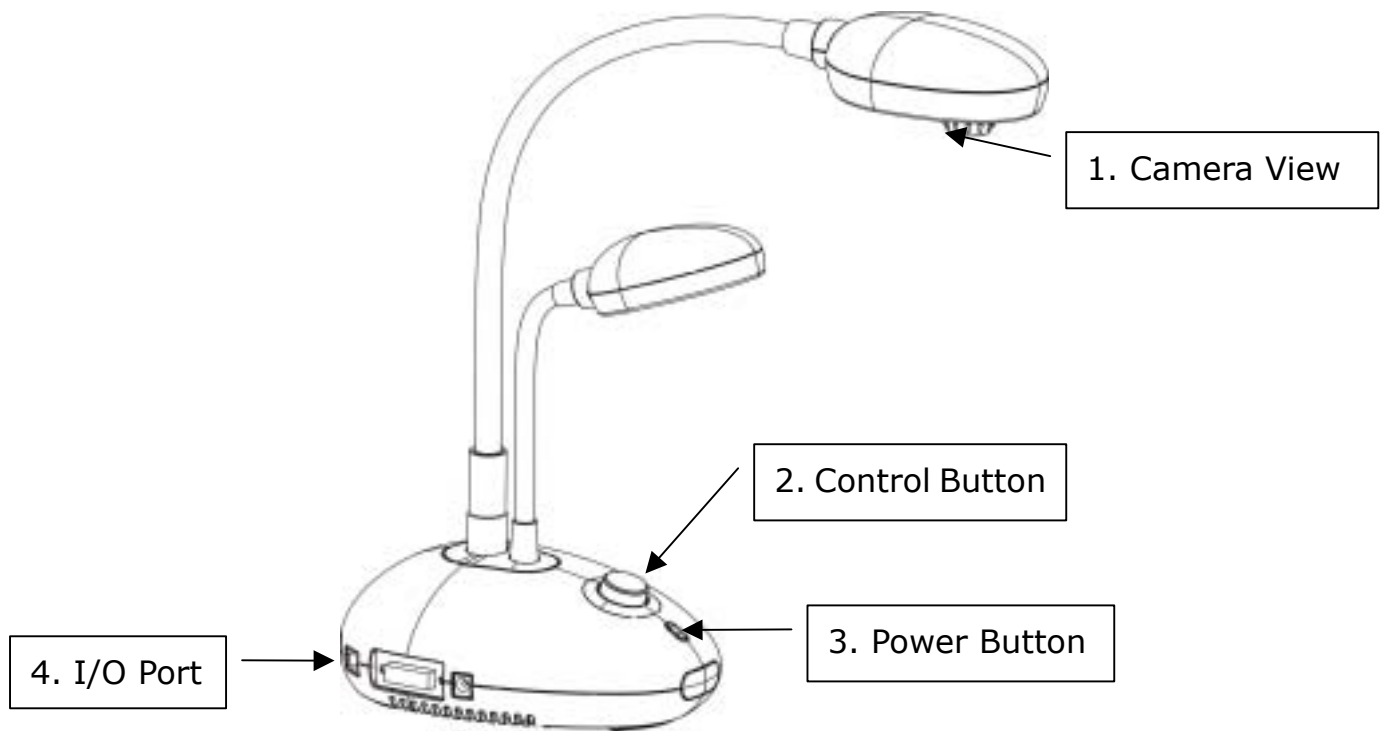 


Figure 3-1


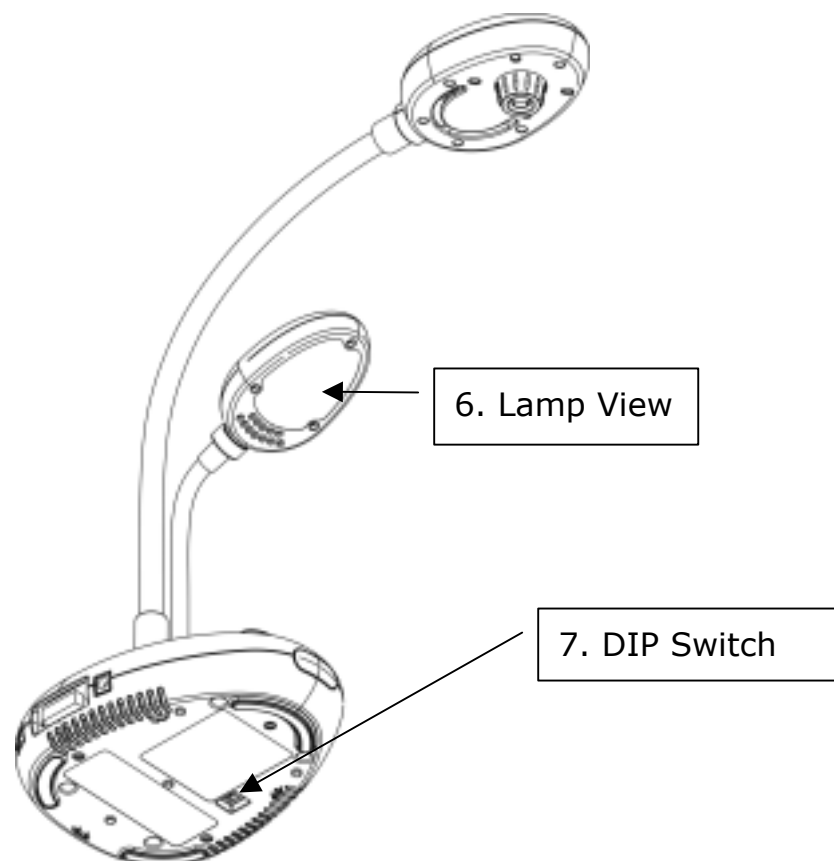 


Figure 3-2

 3.2 I/O Connection

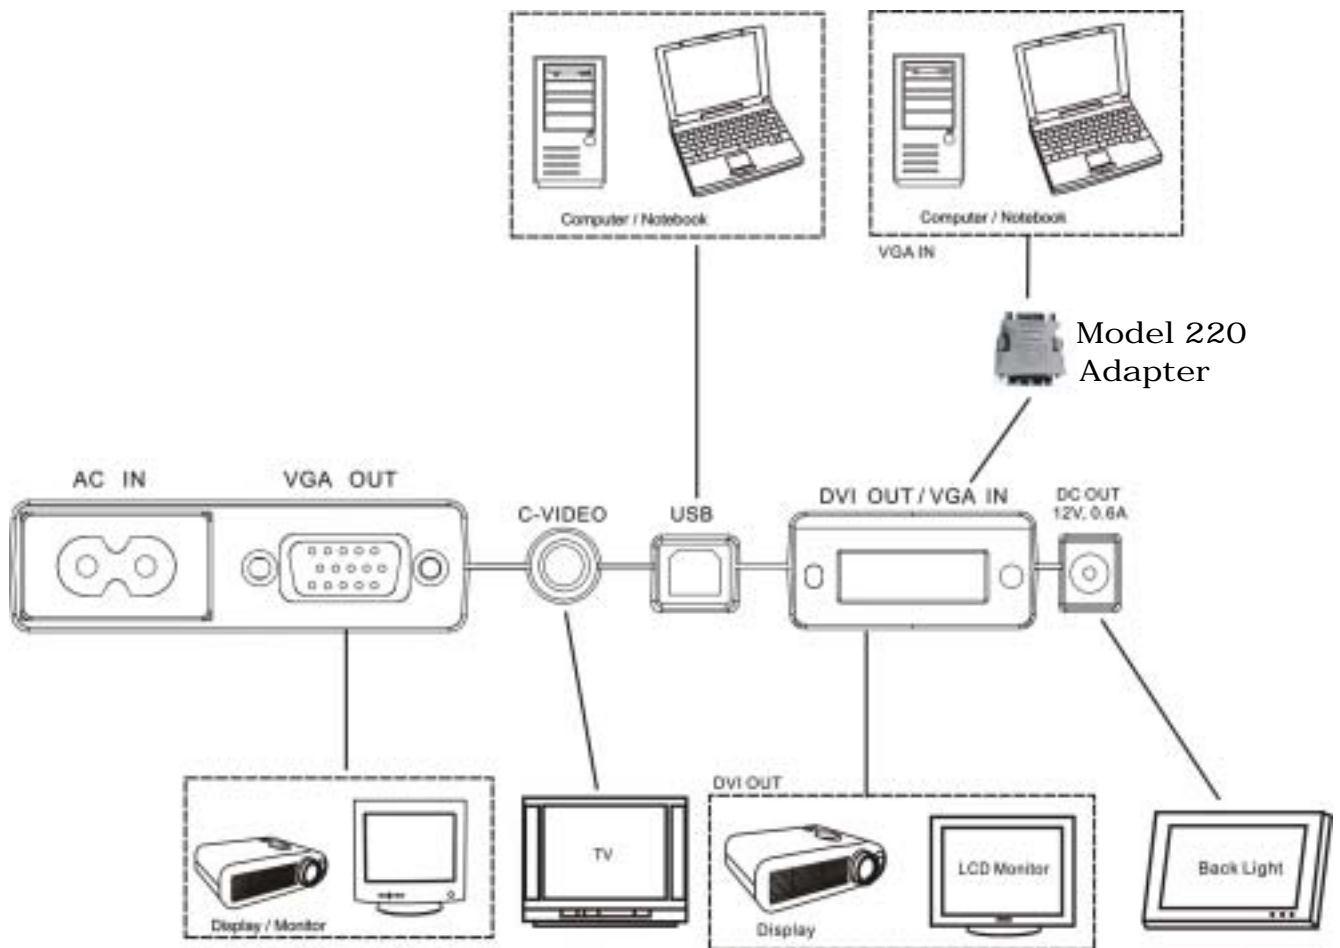

DVI for Model 220 only.

Figure 3-3

3.3 Infrared Remote Control (Model 220)

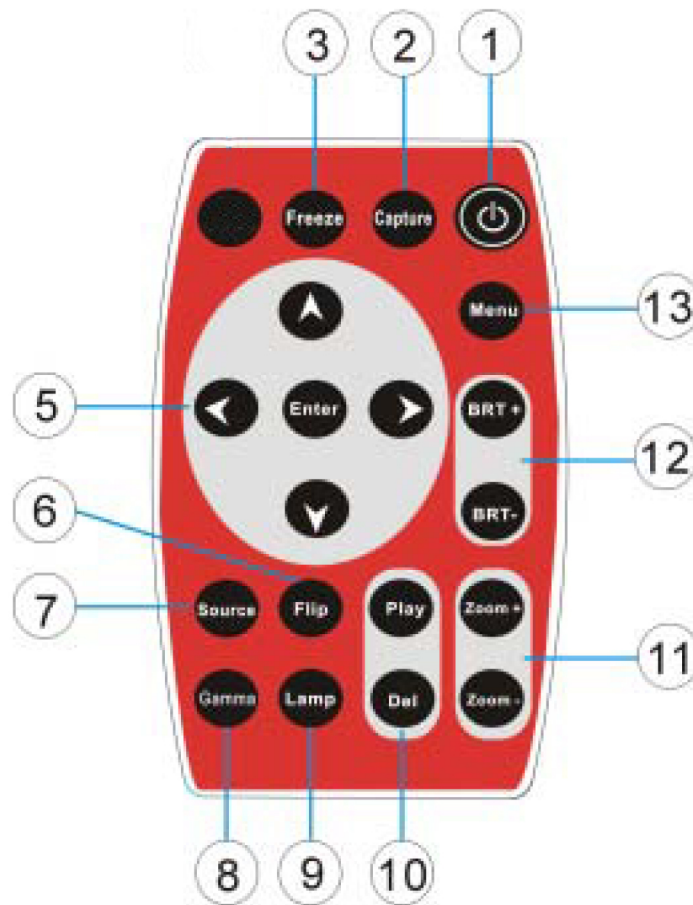 


Figure 3-4

- | | |
|---|--|
| 1. Power:
Turn on/off. | 8. Gamma:
Different color contrast mode. |
| 2. Capture:
Capture the image. | 9. Lamp:
Turn on/off Lamp. |
| 3. Freeze:
Freeze the image. | 10. Play & Del:
Press play, you can recall the saved images in the flash memory of your Digital Presenter. Press Del if you would like to discard the saved image. |
| 5. Arrows:
Press the 4 hot keys of Up/Down/Right/Left to go to the desired function item. | 11. Zoom +/-:
Make the image larger & smaller. |
| 6. Flip:
Rotate the image by 180 degrees. | 12. BRT+/-:
Press the hot key to make the image brighter or darker. |
| 7. Source:
Switch between different signal sources. | 13. Menu:
Click on Menu, to adjust all the functions on the screen. |

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCRDING TO THE INSTRUCTIONS.

 
Chapter 4 Using the Presenter

This chapter describes the basic and advanced functions of the Digital Presenter, how to use the OSD menu.

4.1 Getting Started

Turn on the Digital Presenter.

- Option 1: Press  Small Button.

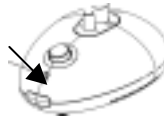


Model 220 only

- Option 2: Press  the Button on Remote control.

4.2 Using the Menu Introduction

Showing the Main Menu:

 - Option 1: Press  Knob-Button. (Control Button.)

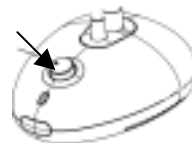

Model 220 only

- Option 2: Press  Button.



Menu operation:

First, press button to start the Menu.

Turn the control button to choose function.









Second, choosing function, press control button to start this function.

Menus



Note that menus are different for the Model 210 and the 220.

4.3 Menu Model 210 only






VGA Mode Computer Image. Use the Control Button for menu operation.

Layer 1	Layer 2	Function
 Flip	On/Off	Select flip on or off
 Source	Presenter/ VGA In	Select images of Presenter and VGA In.
 Zoom	Digital Zoom <input type="text"/> 0100%	Adjust zoom 0100% ~ 1500%
 Lamp	On/Off	Select lamp on or off
 Image	Normal/Gray/Film	Select Normal/Gray/Film Mode.
 Language	English, Deutsch, Francais, Italiano, Espanol, Русский,, 中繁, 中簡, Exit	Select a preferred language on the menu.
 Factory Reset	Enter/Exit	Reset all the values to the factory default.
 EXIT		Exit this menu.

VIDEO Mode

Layer 1	Function
	Select Lamp On
	Select Lamp Off






Model 220 Menu

The Main Menu has five icons (Setting , Display , Source , Storage , and Exit ).




The Control Button or the remote control can be used to navigate the menu.

Menu Model 220 only

VGA Mode (Computer Image)

Layer 1	Layer 2	Layer 3	Function
 Setting	Lamp	On/Off	Select Lamp On or Off.
	Language	English, Deutsch, Francais, Italiano, Espanol, Русский, 中繁, 中簡, Exit	Select a preferred language on the menu.
	Output Format	XGA 75Hz/XGA 60Hz SVGA 75Hz/ SVGA 60Hz	Chooses a preferred resolution to be the output mode.
	Factory Reset	Enter/Exit	Reset all the values to the factory default.
	Exit		Exit this menu.
 Display	Zoom	Digital Zoom 0100% ◀ <input type="text"/> ▶	Adjust Zoom 100% ~ 1500%.
	Gamma	Photo/Text	Select Photo/Text Mode.
	Image	Normal/Gray/Film	Select Normal/Gray/Film Mode.
	Flip	On/Off	Adjust the image up and down by 180°.
	Freeze	On/Off	Use Freeze to retain the image on the screen.
	Exit		Exit this menu.
 Source	Presenter		Select images of Presenter camera or the VGA In.
	VGA In		
 Storage	Capture		Capture the image of Presenter.
	Playback		Present the captured image.
	Delete		Delete the captured image.
	Delete All	Delete All	Delete all images.
		Enter/ Exit	
	Format	Memory Format	Memory Format
		Enter/ Exit	
	Exit		Exit this menu.
 Exit			Exit menu.

VIDEO Mode (Video Image)

Layer 1	Layer 2	Layer 3	Function
 Display	Gamma	Photo/Text	Select Photo/Text Mode.
	Image	Normal/Gray	Select Normal/Gray Mode.
	Freeze	On/Off	Use Freeze to retain the image on the screen.
	Exit		Exit this menu.
 Setting	Language	English, 中繁, 中簡, Exit	Select a preferred language on the menu.
	Lamp	On/Off	Adjust On/Off.
	Factory Reset	On/Off	Reset all the values to the factory default.
	Exit		Exit this menu.
			Exit menu.

4.4 Base Bottom Switch

On the bottom of the base are four (4) small switches, which can change the Presenter operation. After a switch is changed the power must be turn "off" and back "on" before the new function will be operational. Also when the video is switched "on" the VGA (computer) mode will not be operating. The video "on" will limit the camera to NTSC or PAL resolution. The switch settings are:

Switch Number	On	Off	Function
SW1	AE	AE	Auto Exposure
SW2	VIDEO	VIDEO	Video Operation
SW3	PAL	NTSC	Video Type
SW4	-	Set Here	Reserved

Default operation, all switches in "Off" position.

Chapter 5 Troubleshooting

This chapter describes the conditions you might have encountered when you use the Digital Presenter. If you have a problem, refer to the appropriate section and follow all the suggestions that apply to your problem. If none of the suggested solutions solves the problem, call your dealer or your service center.

Problem 1: No picture from the Digital Presenter.

Solution -

- 1: Wait a few seconds, press desired source selector again.
- 2: Press a different source, then press-desired source again.
- 3: Check if the power of the Digital Presenter is turned on.
- 4: Make sure the document or object is positioned under the camera.

Problem 2: Cannot Focus, camera will not focus properly.

Solution - To properly focus: Zoom in as far as possible on the document or object, focus, then zoom out to desired distance.

Problem 3: Image is too bright or dark, cannot see desired part of the image because it is too bright or dark.

Solution – Adjust the Control Knob Button on the Digital Presenter.

Audio Visual Products

Dukane Corporation
Audio Visual Products Division
2900 Dukane Drive
St. Charles, IL 60174-3395
E-mail: avsales@dukcorp.com
www.dukcorp.com/av

Phone: (630) 762-4040
Orders: (800) 676-2485
Fax: (630) 584-5156
Parts & Service: (800) 676-2487
Fax: (630) 584-0984

DUKANE

Part # 401-210_220-01